

## INFLATABLE MOVIE SCREEN Indoor/Outdoor

## INFLATABLE MOVIE SCREEN

Indoor/Outdoor



**NOTE:**

To continuously improve its products, VIVOHOME reserves the right to modify this information without prior notification.  
For any questions during assembly, please watch the video in the product page for reference. Or contact our customer service with any questions, comments, or concerns.  
Thank you for using VIVOHOME products in your home!

Thank You For Purchasing From  
VIVOHOME  
MADE IN CHINA


## Instructions

Movie time!

## Large Display



## Set-Up Details

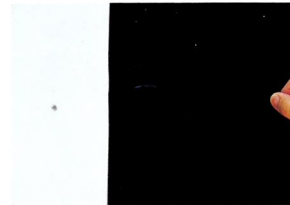


## General Information and Warnings


- Do not over inflate. Use only the supplied air pump as directed. Never use an air compressor.
- This screen is not a flotation device, do not use in any type of pool.
- To avoid danger of suffocation, keep children away from the screen when inflating and deflating.
- Do not let children sit or play on the screen. Always deflate and store screen immediately after use. Adult supervision is required.
- Do not use screen during high winds in excess of 15 mph or under threat of lightning.
- Do not smoke near the screen. Keep away from fire.
- Do not use sharp objects in any manner around the screen.
- Do not climb or sit on inflated surfaces.
- Clean only with mild soap and water. Do not use harsh chemicals.

## List of Materials

- Your package will include the following materials

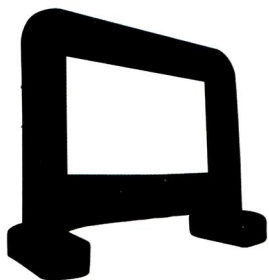


Inflatable Frame

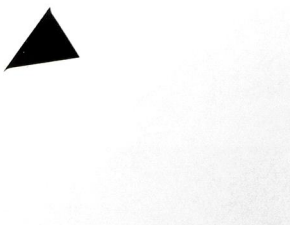

White PVC Screen



1 Air pump  
14 feet' embedded  
in the frame

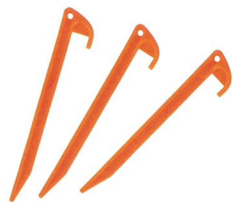

8 Ground Nails




4 Ropes

## Set Up

- Open and spread out the black MegaScreen XL frame on ground with clips to hold screen on top side.
- Open screen and attach onto clips all around screen.
- Plug in blower and hold opening firmly so it does not suck in dirt or other items.
- Once fully inflated, you can go adjust screen straps to ensure screen is snug. Do not worry about having wrinkles as this special material reflects images well despite wrinkles.
- Stand up screen and use ground stakes to hold bottom of frame to ground using 4 rings at front and back of legs.
- Attach 2 ropes to each side ring and go out at a 45 degree angle from frame and attach rope to stakes in ground (see top view image below).

## Take Down

- Remove stakes and lay backside on ground with screen on top.
- Remove screen and fold with front side to center so it will not get dirty.
- Unplug motor and roll up frame with motor on inside
- Put everything into carrying bag to store. DO NOT store in carry bag if wet.
- Leave open until dry before putting away to prevent mildew.

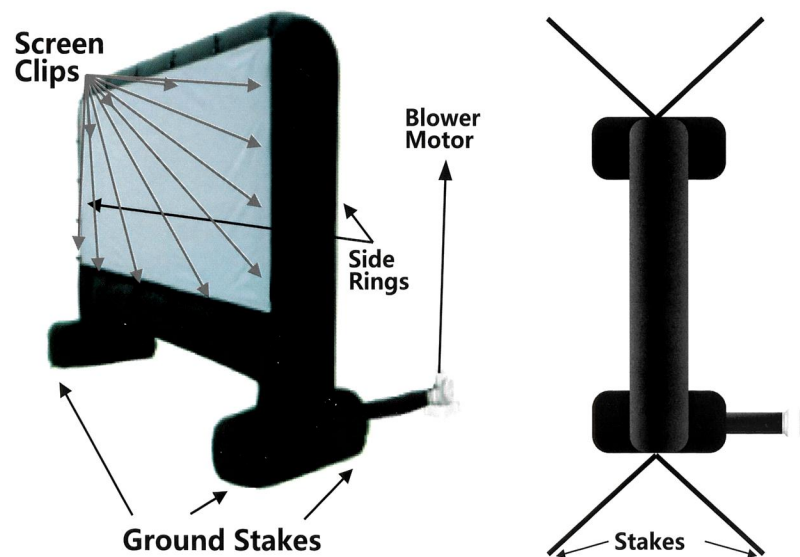



## **Select A Setup Site**

- Select a site that has the necessary height clearance for the screen and enough room for your projector to properly focus the projected image.
- Be sure there are no sharp objects lying on the surface that might puncture or tear the screen.
- Check to be sure that a 110V/120V AC wall outlet is within reach to plug in the air pump.
- Use a properly grounded GFI outlet if using the product outdoors.
- Unpack the screen at the location in which it will be inflated.

## **Unpacking the Screen**

- Remove all the items from box. Do not cut the box open, as this may damage the screen.

## **WARNINGS**

- Never attempt to disassemble or close the openings while pump is operating
- Never leave pump unattended while in use.
- Never allow sand, small rocks etc... to be sucked into the inflation or deflation port while operating.
- Do not use under wet conditions – keep away from water.
- Never look into or point the inflation port toward your eyes while pump is operating.
- Keep away from children.
- When used outdoors or near water, use a properly grounded GFI outlet.

## **NOTE**

- After use, please remember to store the white screen and the black inflatable column separately to prevent the screen from being stained.